

CLEANING INSTRUCTIONS

for DERMALOG JENETRIC SCANNER



CAUTION

Do not use acetone, oil-based, abrasive or other unauthorized cleaners. This may damage the device and render it inoperable.

Using unapproved cleaning solutions will void the warranty.

Alcohol (Isopropanol) provides the best compatibility to clean the scanner surface.



WARNING

Alcohol (Isopropanol) is highly flammable and irritating to eyes.

Vapors may cause drowsiness and dizziness.

You must pay attention to the manufacturers precautionary instructions of the cleaning supplies.


STEP 1

Spray a small amount of the alcohol cleaner onto a soft lint-free cloth or use an alcohol cleaning pad.




STEP 2

Wipe off the display and the scan area until clean and allow the surface to dry.

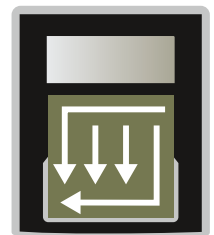

STEP 3

Use a microfiber cloth to remove any remaining moisture on the display and the scan area.

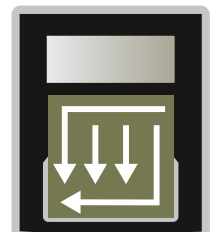

cleaning instructions video
https://youtu.be/a0ENrn_nSxo



© 2023 All content and images are owned by DERMALOG JENETRIC GmbH and are actively protected by copyright.